vtech®

Innovation Beyond Technology℠

User's manual

www.vtech.com/hk/tel

Model: LS6245

DECT

Table of contents

1. IMPORTANT SAFETY INSTRUCTIONS 1

2. SETTING UP THE TELEPHONE 2

2.1 Package contents 2
2.2 Location 2
2.3 Connecting the telephone 2
2.4 Installing and charging the battery pack 3

3. GETTING TO KNOW YOUR PHONE 4

3.1 Overview of your handset 4
3.2 Handset LCD display 5
3.3 Handset menu structure 6
3.4 Overview of the base 7
3.5 Base LCD display 9
3.6 Base Menu Structure 10
3.7 Text and Digit Entry Table 10

4. BLUETOOTH® 12

4.1 Introducing **Bluetooth** 12
4.2 Glossary of terms 13
4.3 **Bluetooth** at a glance 14
4.4 Pair and connect a cell phone 14
4.5 Pair and connect a headset 15
4.6 Paired Devices 16
4.6.1 Rename a paired device 16
4.6.2 Remove a paired device 16
4.6.3 View information of a paired device 17
4.7 Active devices 17
4.7.1 Review the active devices list 17
4.7.2 Connect/disconnect an active device 17
4.7.3 Replace an active device 18
4.7.4 Add an active device 18
4.7.5 Remove an active device 18
4.7.6 View information of an active device 19
4.8 Change PIN 19
4.9 Download phonebook 19

5. USING YOUR PHONE 22

5.1 Make a Home Call 22
5.1.1 Preparatory Dialing 22
5.1.2 Direct Dialing 22
5.1.3 Call from the phonebook 23
5.1.4 Call from the Call Log 23
5.1.5 Call from the redial list 24
5.2 Answer a Home Call 25
5.3 End a Home Call 25
5.4 Call waiting on the home line 25
5.5 Make a Cell Call 26
5.5.1 Preparatory Dialing 26
5.5.2 Direct Dialing 26
5.5.3 Call from the phonebook 27
5.5.4 Call from the Call Log 27
5.5.5 Call from the redial list 28
5.6 Answer a Cell Call 28
5.7 End a Cell Call 28
5.8 Call waiting on the cell line 29
5.9 Answer a cell call while on a home call 29
5.10 Answer a home call while on a cell call 30
5.11 Conference home and cell calls 30
5.12 Chain Dialing 31
5.12.1 Access a Number in the Phonebook on a Home Call 31
5.12.2 Access a Number in the Call Log on a Home Call 32
5.12.3 Access the Last Number Redial on a Home Call 32
5.13 Adjust Earpiece and Handsfree Volume 33
5.14 Mute a Call 33

Table of contents

5.15 Infrared sensor 34
5.16 Hold a Call 34
5.17 Set the Silent Mode 35
5.18 Keypad Lock/Unlock 35
5.19 Redial the last number 35
5.19.1 Redial a Number from the Redial List 35
5.19.2 Store a Redial Number into the Phonebook 36
5.19.3 Delete a Redial Number 37
5.20 Find the Handset 38
5.21 Intercom and Conference Call 38
5.21.1 Intercom 38
5.21.2 Transfer an External Call 39
5.21.3 Make a 3-way Conference Call 40
5.21.4 Switch between internal call and external call 41

6. PRIVATE PHONEBOOK 42
6.1 Add a New Phonebook Entry 42
6.2 View a Phonebook Entry 43
6.3 Edit a Phonebook Entry 44
6.4 Delete a Phonebook Entry 45
6.5 Remove a downloaded phonebook (for downloaded phonebook only) 46
6.6 Security PIN for downloaded phonebook 47

7. CALLER DISPLAY (NETWORK DEPENDENT) 49
7.1 View the Call Log 49
7.2 Store a Call Log Number into the Phonebook 49
7.3 Delete an entry in the Call Log 50
7.4 Delete the entire list of the Call Log 51

8. PHONE SETTINGS 52
Using a handset:
8.1 Set the Audio 52
8.1.1 Set the Ringer Volume 52
8.1.2 Set the Ringer Tone 52
8.1.3 Set the Key Tone 53
8.1.4 Set the Low battery tone 53
8.1.5 Set the No Coverage Tone 53
8.2 Set the Date and Time 54
8.2.1 Change the Date Format 54
8.2.2 Change the Time Format 54
8.2.3 Set Date/Time 54
8.3 Set the Auto Keylock 55
8.4 De-register 55
8.5 Set the Dial Mode 56
8.6 Set the Flash Time 56
8.7 Set the ECO Mode Range 56
8.8 Change the System PIN 57
8.9 Reset the handset 57
Using the base:
8.10 Set the Audio 58
8.10.1 Set the Ringer Volume 58
8.10.2 Set the Ringer Tone 58
8.10.3 Set the Key Tone 59
8.11 Set the Date and Time 59
8.11.1 Change the Date Format 59
8.11.2 Change the Time Format 59
8.11.3 Set Date/Time 60
8.12 De-register 60
8.13 Set the Dial Mode 61
8.14 Set the Flash Time 61
8.15 Set the ECO Mode Range 61
8.16 Change the System PIN 61
8.17 Reset the base 62

9. REGISTRATION 63

Table of contents

10.ANSWERING MACHINE.....64

Using a handset:

10.1 Switching Answering Machine On/Off 64
10.2 Announcement 65
10.2.1 Record your own announcement.....65
10.2.2 Playback the announcement 65
10.2.3 Delete the recorded announcement 66
10.3 Answering machine message.....66
10.3.1 Play messages 66
10.3.2 Delete a message.....67
10.3.3 Delete all old messages 67
10.4 Record a memo 67
10.5 Incoming Call Messages (ICM).....68
10.6 Answering Machine Settings 68
10.6.1 Set answer mode.....68
10.6.2 Set number of rings to answer.....68
10.6.3 Set the recording time of message.....69
10.6.4 Set call screening on or off 69
10.6.5 Set answering machine message alert on or off 69
10.7 Remote Operations 70

Using the base:

10.8 Switching Answering Machine On/Off 71
10.9 Announcement 71
10.9.1 Record your own announcement.....71
10.9.2 Playback the announcement 72
10.9.3 Delete the recorded announcement 72
10.10 Answering machine message.....72
10.10.1 Play messages 73
10.10.2 Delete a message.....73
10.10.3 Delete all old messages 74
10.11 Record a memo 74
10.12 Incoming Call Messages (ICM).....75
10.13 Answering Machine Settings 75
10.13.1 Set answer mode.....75
10.13.2 Set number of rings to answer.....75
10.13.3 Set the recording time of message 76
10.13.4 Set call screening on or off 76
10.13.5 Set answering machine message alert on or off..... 76
10.14 Remote Operations..... 77

11.DEFAULT SETTINGS.....78

12.TROUBLESHOOTING 81

13.TECHNICAL SPECIFICATIONS.....86

1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet and refer servicing to VTech under the following conditions:
   - When the power adapter or plug is damaged or frayed.
   - If the product does not operate normally by following the operating instructions.
   - If the product has been dropped and the cabinet has been damaged.
   - If the product exhibits a distinct change in performance.
7. Avoid using corded telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) battery pack! The operation periods for the handsets are only applicable with the default battery pack capacities.
10. The use of other battery pack types or non-rechargeable battery packs/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. The battery pack may be damaged.
12. Please note the correct polarity while inserting the battery pack.
13. Do not immerse battery pack in water, do not place in fire.

If you have questions about this product, or having difficulty with setup or operation, call our Customer Service Centre.
Customer Service Hotline: (852) 2666 5558
Technical Inquiry Hotline: (852) 2667 7433

2. SETTING UP THE TELEPHONE

2.1 Package contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 AC power adapter
- 2 Telephone line cords
- 1 Rechargeable battery pack
- 1 Chinese operation manual
- 1 English operation manual

2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

2.3 Connecting the telephone

Before you can start using your telephone you must plug in the telephone connection cords and the mains cable.

Connecting the base station:

1. Plug the power supply & telephone line cord into the base station.
2. Plug the power supply cord into the wall outlet not controlled by a wall switch.
3. Plug the telephone line cord into the wall jack. If you have DSL high speed internet service, a DSL filter (not included) is required.

4. Always use the cables provided in the box.

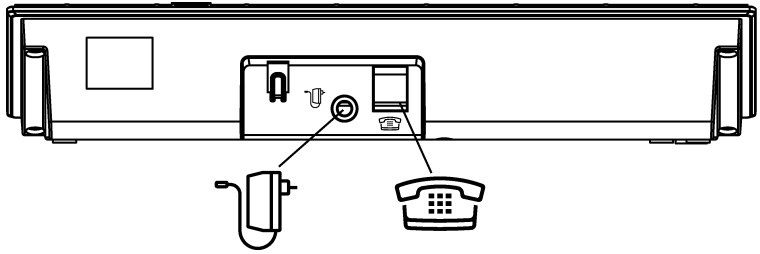

2.4 Installing and charging the battery pack

1. Slide out the battery compartment cover.
2. Place the supplied battery pack as indicated. Locate the battery pack lead and connector and plug it into the socket inside the battery compartment (the red wire should be on the left). Tuck the battery pack leads in the space above the battery pack.
3. Slide the battery compartment cover back.
4. Put the handset on the base and charge the battery pack for 16 hours first time.

Use only the supplied NiMH rechargeable battery pack.

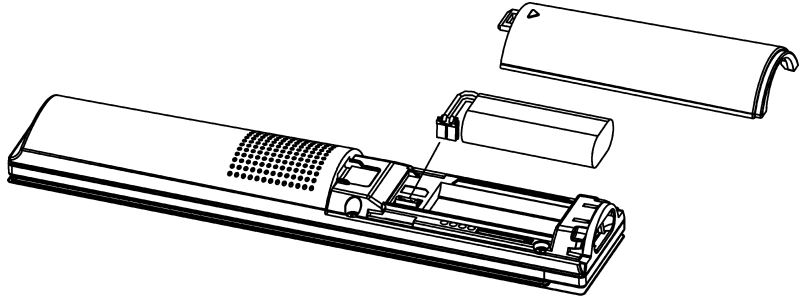

3. GETTING TO KNOW YOUR PHONE

3.1 Overview of your handset

1. **Infrared sensor**
   When the infrared sensor is covered during a call, all keys on the dial pad are disabled.
2. **Right soft key**
   Press to select a menu item displayed above the key.
3. **Scroll down/Volume down/Call log**
   In idle mode: Press to review the call log.
   During a call: Press to decrease the listening volume.
   In menu mode: Press to scroll down.
4. **Talk off/Clear**
   During a call: Press to hang up.
   In ringing mode: Press to silence the ringer temporarily.
   In menu mode: Press to exit without making changes. Press and hold to return to idle mode.
   In editing mode: Press to erase a digit or character.
5. **Cell**
   In idle mode: Press to make a cell call.
   In ringing mode: Press to answer a cell call. Flashes quickly when there is an incoming cell call.
   Flashes slowly when a cell call is on hold.
6. **Charging LED**
   Steadily on when in charging.
7. **Left soft key**
   Press to select a menu item displayed above the key.
8. **Scroll up/Volume up/Phonebook**
   In menu mode: Press to scroll up.
   During a call: Press to increase the listening volume.
   In idle mode: Press to enter the phonebook.

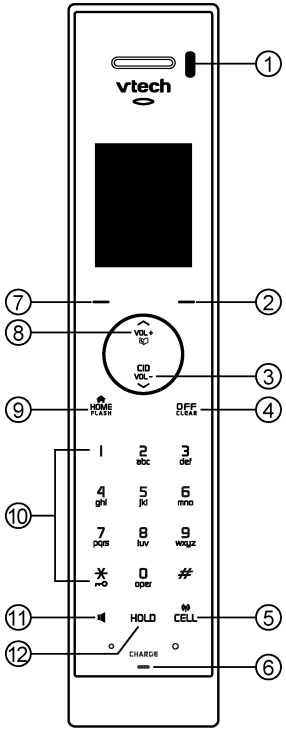

9. **Home/Flash**
   In idle mode: Press to make a home call.
   In ringing mode: Press to answer a home call. Flashes quickly when there is an incoming home call.
   Flashes slowly when a home call is on hold.
10. **Alphanumeric keypad, *, #**
    In idle/pre-dial/editing mode/during a call: Press to enter characters/ numbers.
    #
    In idle/pre-dial/during a call mode: Press to insert a "#".
    ***
    In idle/pre-dial/during a call mode: Press to insert a "*".
    In phonebook entry name editing mode: Press to toggle between upper case and lower case.
    During a call: Press to turn to tone temporarily when in pulse dialing mode.
11. **Speakerphone**
    In idle mode: Press to make a home call.
    In ringing mode: Press to answer a home or cell call.
    During a call: Press to switch between speakerphone and handset.
12. **Hold**
    During a call: Press to put a call on hold.

3.2 Handset LCD display

	Home line - on steadily when the home line is in use or there is an incoming home call.
1 2	**CELL** line - on steadily when the cell line is in use or there is an incoming cell call.
1 2	**Bluetooth connected device(s)** - indicates that there are **Bluetooth** connected devices on the active devices list.
	Bluetooth disconnected device(s) - indicates that there are **Bluetooth** disconnected devices on the active devices list.
1 or 2	**Bluetooth wireless headset** - on steadily when a **Bluetooth** wireless headset is in use on the home line.
	Ringer off - on steadily when all the ringers of **Home**, **Cellular 1** and **Cellular 2** are turned off. Flashes when only one or two of the ringers are turned off.

	Speakerphone - the speakerphone is in use.
	New answering system message - indicates you have a new answering system message(s).
	Battery status - animates when the battery is charging. Becomes solid when the battery is fully charged.
	Battery status - flashes when the battery is low and needs charging.
	Answering system on - indicates that the answering system is turned on to answer incoming home calls.
	New call log - indicates that the missed call is new.
	Mute - the microphone is muted.

3.3 Handset menu structure

In idle mode, press **MENU** will firstly access the Ans. system menu. Refer to the following for the menu structure.

Main Menu	ANS. SYSTEM	PHONEBOOK	CALL LOG	INTERCOM	AUDIO	SETTINGS
Sub Menu	Play msgs Del all old Record memo Ans sys setup	Review Store	Review Del all calls		Ringer volume Ringer tone Key tone Low battery No coverage	Set date/time Time format Date format Auto keylock Register De-register Dial mode Flash time ECO mode range System PIN Reset

3.4 Overview of the base

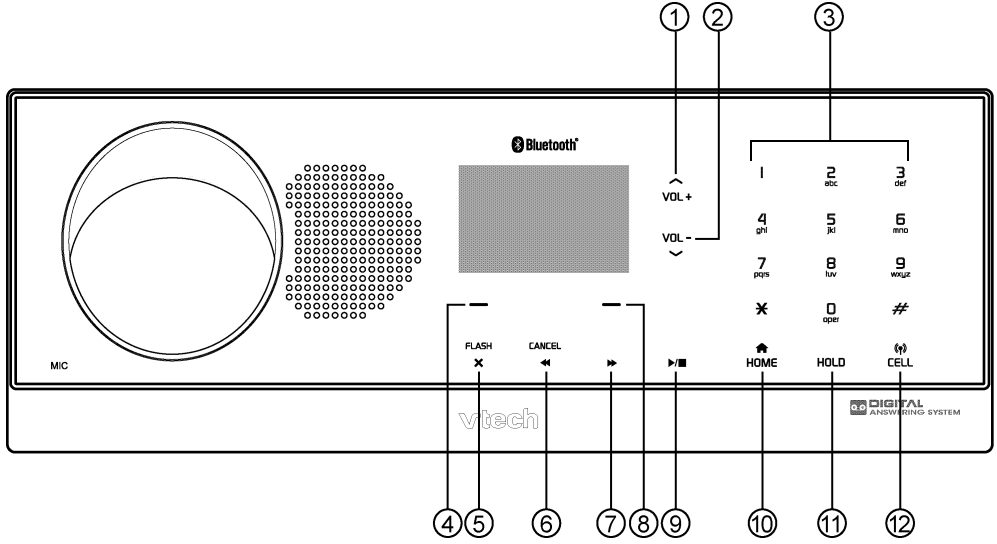

1	**Scroll up/Volume up** In menu mode: Press to scroll up. During a call: Press to increase the listening volume.

2	**Scroll down/Volume down** In menu mode: Press to scroll down. During a call: Press to decrease the listening volume.

3	**Alphanumeric keypad , *, #** In idle/pre-dial/editing mode/during a call: Press to enter characters/numbers. **#** In idle/pre-dial/during a call mode: Press to insert a "#". * In idle/pre-dial/during a call mode: Press to insert a "*". In phonebook entry name editing mode: Press to toggle between upper case and lower case. During a call: Press to turn to tone temporarily when in pulse dialing mode.
4	**Left soft key** Press to select a menu item displayed above the key.
5	**Flash/Delete** In message playing mode: Press to delete the message currently playing.
6	**Skip backward/Clear/Cancel** In ringing mode: Press to silence the ringer temporarily. In menu mode: Press to exit without making changes. Press and hold to return to idle mode. In message playing mode: Press to repeat a message or press twice to play the previous message.
7	**Skip forward** In message playing mode: Press to skip to the next message.

8	**Right soft key** Press to select a menu item displayed above the key.
9	**Play/Stop** In idle mode: Press to play messages. In message playing mode: Press to stop message playback.
10	**Home** In idle mode: Press to make a home call. In ringing mode: Press to answer a home call. Flashes quickly when there is an incoming home call. Flashes slowly when a home call is on hold.
11	**Hold** During a call: Press to put a call on hold.
12	**Cell** In idle mode: Press to make a cell call. In ringing mode: Press to answer a cell call. Flashes quickly when there is an incoming cell call. Flashes slowly when a cell call is on hold.

3.5 Base LCD display

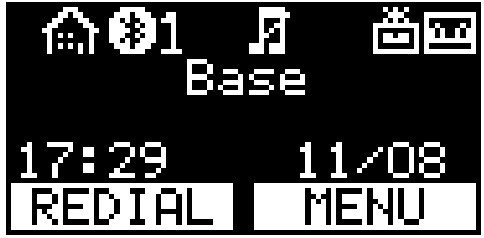

	Home line - on steadily when the home line is in use or there is an incoming home call.
1 2	**CELL** line - on steadily when the cell line is in use or there is an incoming cell call.
1 2	**Bluetooth connected device(s)** - indicates that there are **Bluetooth** connected devices on the active devices list.
	Bluetooth disconnected device(s) - indicates that there are **Bluetooth** disconnected devices on the active devices list.
1 or 2	**Bluetooth wireless headset** - on steadily when a **Bluetooth** wireless headset is in use on the home line.

	Ringer off - on steadily when all the ringers of **Home**, **Cellular 1** and **Cellular 2** are turned off. Flashes when only one or two of the ringers are turned off.
	New answering system message - indicates you have a new answering system message(s).
	Answering system on - indicates that the answering system is turned on to answer incoming home calls.
	New call log - indicates that the missed call is new.
	Mute - the microphone is muted.

3.6 Base Menu Structure

In idle mode, press **MENU** will firstly access the Ans. system menu. Refer to the following for the menu structure.

Main Menu	ANS. SYSTEM	PHONEBOOK	CALL LOG	PAGE ALL HS	INTERCOM	BLUETOOTH	AUDIO	SETTINGS
Sub Menu	Play msgs Del all old Record memo Ans sys setup	Home Cellular 1/2/3/4 *(If you have downloaded phonebook from cell phones.)*	Review Del all calls			Download PB Setup cell Setup headset Active devices Paired devices Change PIN	Ringer volume Ringer tone Key tone	Set date/time Time format Date format De-register Dial mode Flash time ECO mode range System PIN Reset

3.7 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the characters will move forward and leave the cursor at the right.
2. You can move the cursor within the text by VOL+ / VOL- on the handset or VOL+ / VOL- on the base to amend the text entry.
3. Press OFF CLEAR on the handset or CANCEL on the base to delete the last character.
4. Press and hold OFF CLEAR on the handset or CANCEL on the base to delete the entire text string.

Upper case

1	Space 1 @ _ # = < > ( ) & £ $ ¥ € [ ] { } ¤ §
2	A B C 2 Ä À Á Â Ã Å Æ Ç
3	D E F 3 È É Ë Ê Δ Φ
4	G H I 4 Ğ Ì Í Î Ï İ Γ
5	J K L 5 Λ
6	M N O 6 Ö Ò Ó Ô Õ Ø Ñ
7	P Q R S 7 β Ş Π Θ Σ
8	T U V 8 Ü Ù Ú Û
9	W X Y Z 9 Ý Ÿ Ω Ξ Ψ
0	. 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |

Lower case

1	Space 1 @ _ # = < > ( ) & £ $ ¥ € [ ] { } ¤ §
2	a b c 2 ä à á â ã å æ ç
3	d e f 3 è é ë ê Δ Φ
4	g h i 4 ğ ì í î ï ı Γ
5	j k l 5 Λ
6	m n o 6 ö ò ó ô õ ø ñ
7	p q r s 7 β ş Π Θ Σ
8	t u v 8 ü ù ú û
9	w x y z 9 ý ÿ Ω Ξ Ψ
0	. 0 , / : ; " ' ! ¡ ? ¿ * + - % \ ^ ~ |

4. BLUETOOTH®

4.1 Introducing Bluetooth

Your new **VTech LS6245** telephone system with **Bluetooth** wireless technology has the following features:

- Pair up to four **Bluetooth** wireless technology enabled cell phones with the telephone base.
- Connect a maximum of two cell phones to make and receive cell calls. Only one cell phone can be active on a call at a time.
- Connect a **Bluetooth** wireless technology enabled headset for making and receiving home calls.
- Conference cell and home calls.
- Make and receive calls using your cell phone plan while utilizing the ease and comfort of your home telephone system.

IMPORTANT INFORMATION

- After plugging in the telephone base, wait at least 20 seconds before connecting a **Bluetooth** wireless technology enabled device. The screen shows “BLUETOOTH SYSTEM BUSY” if you try to connect too soon.
- Refer to the user's manual of your cell phone or headset for more information about its **Bluetooth** function.
- **Bluetooth** wireless technology operates within a short range (about 30 feet). When using a cell phone with the **VTech LS6245**, it is best to place your cell phone between one and fifteen feet from the telephone base. When using a **Bluetooth** wireless technology enabled headset with the **VTech LS6245**, you are limited to the range of your headset (see the user's manual of your headset for more information).
- Make sure that your cell phone has sufficient signal strength. You may need to move the cell phone and telephone base to a location where the cell phone signal strength is stronger.
- Charge your **Bluetooth** wireless technology enabled cell phone while it is connected to the telephone base. Your cell phone's battery discharges faster while it is connected to the telephone base via **Bluetooth** wireless technology.
- Monitor your cell phone's usage because airtime is deducted from your cellular plan for the duration of all cell calls.

The *Bluetooth*® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

4.2 Glossary of terms

Below are some terms used in this user's manual to help you become familiar with using your **Bluetooth** wireless technology enabled devices and your new **VTech LS6245** telephone system.

Active devices	A maximum of two paired devices (two cell phones, or one cell phone and one headset) on the active devices list can be connected to the telephone base, but only one cell phone or headset can be on a call at a time.
Bluetooth wireless technology enabled cell phone	Refers to a **Bluetooth** wireless technology enabled cell telephone.
Cell line	The communication service provided through your **Bluetooth** wireless technology enabled cell telephone.
Connected	A **Bluetooth** wireless technology enabled device can only be used when it is connected to the telephone base. When a **Bluetooth** wireless technology enabled device is connected to the telephone base and active on the active devices list, it is ready for use.
Disconnected	A diagonal line appears across devices 1 and/or 2 when the corresponding **Bluetooth** wireless technology enabled device is disconnected from the telephone base.
Discoverable mode	Before a **Bluetooth** wireless technology enabled device can be paired, it must be set in this mode. When pairing your cell phone, the telephone base is set in this mode. When pairing a headset, the headset must be set in this mode. Depending on the manufacturer, this mode is sometimes referred to as FIND ME or VISIBILITY.
Home line	Your conventional telephone land line.
Paired devices	Once **Bluetooth** wireless technology enabled devices have been paired with the telephone base, they appear on the paired devices list. A maximum of four devices can be paired with the telephone base, but only two can be on the active devices list.
Pairing	This refers to the process of **Bluetooth** wireless technology enabled device registering device information with each other. The telephone base must be paired with a **Bluetooth** wireless technology enabled cell phone or headset before the **Bluetooth** wireless technology enabled device can be used. Depending on the manufacturer, this is also referred to as BONDING.
PIN	By default, the PIN is **0000** for the telephone base and for most **Bluetooth** wireless technology enabled devices. PIN information must be exchanged between **Bluetooth** wireless technology enabled devices before they can be used. This is also known as a PASSKEY or PASSCODE.

4.3 Bluetooth at a glance

The telephone base allows you to pair up to four **Bluetooth** wireless technology enabled devices. You can have a maximum of two paired devices connected at any time (two cell phones, or one cell phone and one headset), but only one cell phone or headset can be on a call at a time.

Once you have paired a device with the telephone base, the pairing information is stored on the paired devices list. To use a paired device, it must be connected and on the active devices list.

IMPORTANT INFORMATION

- Once you have paired a device with the telephone base, you do not have to repeat the pairing procedure again, unless you delete the device from the paired devices list.
- When adding, removing, or replacing a **Bluetooth** wireless technology enabled device on the active devices list, all connected devices are temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect.

4.4 Pair and connect a cell phone

Before you begin, make sure that your **Bluetooth** wireless technology enabled cell phone is not connected to any other **Bluetooth** wireless technology enabled device. Refer to your cell phone user's manual to learn how to search for or add new **Bluetooth** wireless technology enabled devices.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select SETUP CELL, and then press **SELECT**.

Note:
If a device is already connected to the telephone base, "CONNECTED DEVS WILL BE TEMP. DISCONNECTED" displays. Press **OK** to temporarily disconnect the device and continue the pairing process.

3. Press **NEXT** to set the telephone base to discoverable mode.
4. Turn on the **Bluetooth** feature of your cell phone and search for or add new devices.
5. Once your cell phone finds **LS6245**, select it.
6. Enter the PIN of the telephone base (the default PIN is **0000**) into your cell phone to continue the pairing process.
7. When a device is successfully connected, “DEVICE CONNECTED TO BASE”, and 1 and/or 2 displays.

Note:
When you already have two devices on the active devices list, press **YES** to connect to your paired cell phone. You are prompted to replace an existing device on the active devices list.

The pairing process may take up to one minute. If the pairing process fails, try again.

4.5 Pair and connect a headset

Before you begin, make sure that your **Bluetooth** wireless technology enabled headset is not connected to any other **Bluetooth** wireless technology enabled device. Refer to your headset user's manual to learn how to search for or add new **Bluetooth** wireless technology enabled devices.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select SETUP HEADSET, and then press **SELECT**.

Note:
If a device is already connected to the telephone base, "CONNECTED DEVS WILL BE TEMP. DISCONNECTED" displays. Press **OK** to temporarily disconnect the device and continue the pairing process.

3. Set your headset to discoverable mode.
4. Press **NEXT** on the base to search for your headset.
5. Once the telephone base finds your headset, press **SELECT**.
6. Enter the PIN of your headset (the PIN for most **Bluetooth** wireless technology enabled devices is **0000**), then press **SELECT**. The screen displays "HEADSET SETUP COMPLETE" and then "CONNECT HEADSET TO BASE?"
7. Press **YES**. When a device is successfully connected, "DEVICE CONNECTED TO BASE", and 1 and/or 2 displays.

Note:
When you already have two devices on the active devices list, press **YES** to connect to your paired headset. You are prompted to replace an existing device on the active devices list.
The pairing process may take up to one minute. If the pairing process fails, try again.

4.6 Paired Devices

All paired devices are stored on the paired devices list. Up to four devices (one headset only) can be paired with the telephone base.

To use a paired device, it must be connected and on the active devices list.

Note:
Only 15 characters of the device name can be stored on the paired devices list.

4.6.1 Rename a paired device

You can change the name of a paired device on the paired devices list.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select PAIRED DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select the desired device.
4. Press **OPTION** and VOL+ / VOL- to select RENAME.
5. Press **SELECT** to edit the name.
6. Press **SAVE** to confirm.

4.6.2 Remove a paired device

If you already have the maximum of four paired devices on the paired devices list and you want to add another device, you must first delete a paired device from the paired devices list.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select PAIRED DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select the desired device.
4. Press **OPTION** and VOL+ / VOL- to select REMOVE PAIRED.
5. Press **SELECT** to confirm.
6. Press **YES** to reconfirm, or press **NO** to cancel.

4.6.3 View information of a paired device

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select PAIRED DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select the desired device.
4. Press **INFO** to view the information.
5. Press **OK** to return to the previous menu.

4.7 Active devices

Only devices on the active devices list can establish a **Bluetooth** connection with the telephone base. Although two paired devices can be connected to the telephone base, only one **Bluetooth** wireless technology enabled cell phone or headset can be on a call at a time.

4.7.1 Review the active devices list

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select ACTIVE DEVICES.
3. Press **SELECT** and VOL+ / VOL- to view the active devices list.

4.7.2 Connect/disconnect an active device

While in the active devices menu, you can connect or disconnect your active device.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select ACTIVE DEVICES.
3. Press **SELECT** and VOL+ / VOL- to view the desired device.
4. Press **OPTION** to select CONNECT/DISCONNECT.
5. Press **SELECT** to confirm.

Note:
When your active device is connected, you are prompted to select DISCONNECT. When your active device is disconnected, you are prompted to select CONNECT.

4.7.3 Replace an active device

When you already have two devices on the active devices list, you can replace an active device with a device on the paired devices list.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select PAIRED DEVICES.
3. Press **SELECT** and VOL+ / VOL- to view the desired device.
4. Press **OPTION** to select REPLACE ACTIVE.
5. Press **SELECT** and VOL+ / VOL- to select the device to be replaced.
6. Press **SELECT** to confirm.

4.7.4 Add an active device

You can have a maximum of two devices on the active devices list.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select ACTIVE DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select EMPTY.
4. Press **ADD** and VOL+ / VOL- to select the desired device from the paired devices list.
5. Press **ADD** to confirm.

4.7.5 Remove an active device

You can remove an active device from the active devices list.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select ACTIVE DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select the desired device.
4. Press **OPTION** and VOL+ / VOL- to select REMOVE ACTIVE.
5. Press **SELECT** to confirm.

4.7.6 View information of an active device

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select ACTIVE DEVICES.
3. Press **SELECT** and VOL+ / VOL- to select the desired device.
4. Press **INFO** to view the information.
5. Press **OK** to return to the previous menu.

4.8 Change PIN

You are required to enter a PIN when establishing a **Bluetooth** connection. The default PIN of your telephone base is **0000**.

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** and VOL+ / VOL- to select CHANGE PIN.
3. Press **SELECT** to enter a new four-digit PIN code.
4. Press **SAVE** to confirm.

4.9 Download phonebook

You can download up to four cell phone phonebooks to your LS6245 telephone system via **Bluetooth** wireless technology.
Each downloaded phonebook can store up to 1,500 entries with up to 30 digits for each phone number and 15 characters for each name.
Before downloading the phonebook, make sure the mobile phone is paired to your LS6245 and on the active devices list.
Place your mobile phone next to the telephone base when you download a mobile phone phonebook to your LS6245.

To download a mobile phone phonebook

1. Press **MENU** and VOL+ / VOL- on the base to select BLUETOOTH.
2. Press **SELECT** to select DOWNLOAD PB.
3. Press **SELECT**.
4. Press VOL+ / VOL- to select a desired device, then press **SELECT**.

- If the selected device is on the paired devices list but not on the active devices list, the handset displays NO CELL PHONE ON ACTIVE DEVICES LIST. and then ADD?
- If the selected device is on the active devices list but disconnected, the handset displays NOT CONNECTED. PLACE CELL NEXT TO THE BASE.
- If the selected device's phonebook has already been downloaded to LS6245 before, the handset displays LAST UPDATE ON: MM/DD/YY and then OVERWRITE?. If you press **SELECT** to continue the download process, the stored phonebook for that particular mobile phone will be erased and replaced with the current mobile phone phonebook. The handset then displays PHONEBOOK WILL BE ERASED. DOWNLOAD?. Press **SELECT** to confirm. If you have edited the downloaded entries (page 44), those changes will be lost.
- If you already have four downloaded phonebooks, the handset displays MEMORY IS FULL. REPLACE CURRENT PHONEBOOK? when you try to download another mobile phone phonebook. Press **SELECT** and the system prompt you to replace an existing phonebook.

5. Press VOL+ / VOL- to select one of the following options:
   - PHONE MEMORY - download all contacts stored in your phone memory.
   - SIM CARD ONLY - download all contacts stored in your SIM card.
   - PHONE AND SIM - download all contacts stored in both your phone memory and SIM card.
6. Press **SELECT**. During the download, the handset displays the progress. All system handsets display DOWNLOADING PB.
7. When the downloading process is complete, the handset displays DOWNLOAD ENDED TOTAL #XXXX ENTRIES SAVED. Press **SELECT** to return to the download phonebook menu.

Note:
Only English characters are supported. If any Chinese characters are included in the phonebook entries, they may not be displayed normally.
Certain mobile phones do not support SIM card download. If this is the case, try transferring the contacts from your SIM card to your mobile phone memory first, then download from your mobile phone memory. For more information on how to transfer contacts from your SIM card to your mobile phone memory, see the User Manual of your mobile phone.
When downloading the phonebook from your **Bluetooth** wireless technology enabled mobile phone, some data may not transfer. For example, if you have home, mobile and work numbers for a particular contact, the three categories may not transfer to your LS6245.
For certain mobile phones, you may need to press a key to confirm the phonebook download.

Interruption to phonebook download
If you are downloading a phonebook from a mobile phone and the mobile phone receives a call, the download process stops and all handsets display DOWNLOAD PHONEBOOK ABORTED. You need to download the phonebook again.
If you are downloading a phonebook from a mobile phone and the telephone base loses power, the download process stops. You need to download the phonebook again.

The download progress screen may be replaced with CELL LINE IN USE. To return to the downloading progress screen, do steps one through three on page 19. The download process continues even if any of the followings occur.

- You receive or make calls on the home line.
- You place the handset in the telephone base or charger.
- You access your mobile phone menu features.
- The handset battery pack becomes depleted or the handset loses connection with the telephone base.

Note:
During the download process, do not attempt to make changes to your mobile phone phonebook.

5 USING YOUR PHONE

5.1 Make a Home Call

5.1.1 Preparatory Dialing

Using a handset:

1. Enter the phone number. Press OFF CLEAR to clear the entry.
2. Press HOME FLASH or to dial the number.

Using the base:

1. Enter the phone number. Press CANCEL to clear the entry.
2. Press HOME to dial the number.

Using a Bluetooth wireless technology enabled headset:

1. Enter the phone number on the base. Press CANCEL to clear the entry.
2. Press HOME on the base to dial the number.
3. Press **OPTION** on the base to select USE HEADSET, and then press **SELECT**.

Note:
To switch back to the base, press **OPTION** on the base to select USE SPEAKER, and then press **SELECT**.

5.1.2 Direct Dialing

Using a handset:

Press HOME FLASH or to take the line and enter the phone number.

Using the base:

Press HOME to take the line and enter the phone number.

Using a Bluetooth wireless technology enabled headset:

1. Press HOME on the base to take the line and enter the phone number.
2. Press **OPTION** on the base to select USE HEADSET, and then press **SELECT**.

Note:
To switch back to the base, press **OPTION** on the base to select USE SPEAKER, and then press **SELECT**.

5.1.3 Call from the phonebook

Using a handset:

1. Press VOL+ to access the phonebook list.
2. Press VOL+ / CID VOL- to select the desired phonebook entry.
3. Press HOME FLASH or to dial out to the selected phonebook entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** to select REVIEW, and then press **SELECT**.
3. Press VOL+ / VOL- to select the desired phonebook entry.
4. Press HOME to dial out to the selected phonebook entry.

5.1.4 Call from the Call Log

Using a handset:

1. Press CID VOL- to access the call log.
2. Press VOL+ / CID VOL- to select the desired call log entry.
3. Press HOME FLASH or to dial out to the selected call log entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG.
2. Press **SELECT** to select REVIEW, and then press **SELECT**.
3. Press VOL+ / VOL- to select the desired call log entry.
4. Press HOME to dial out to the selected call log entry.

5.1.5 Call from the redial list

Using a handset:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / CID VOL- to select the desired redial entry.
3. Press HOME FLASH or to dial out to the selected redial entry.

Using the base:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / VOL- to select the desired redial entry.
3. Press HOME to dial out to the selected redial entry.

Note:
Your handset or base automatically times the duration of every call. The call timer will display a few seconds after the call has been made. It is shown in hours, minutes and seconds format (HH:MM:SS).

5.2 Answer a Home Call

Using a handset:

When the phone rings, press HOME/FLASH or to answer a call.

Using the base:

When the phone rings, press HOME to answer a call.

Using a Bluetooth wireless technology enabled headset:

When the phone rings, press the call button on your headset.

5.3 End a Home Call

Using a handset:

During a call connection, press OFF/CLEAR or put the handset on the base to end the call.

Using the base:

During a call connection, press HOME to end the call.

Using a Bluetooth wireless technology enabled headset:

During a call connection, press the call button on your headset to end the call.

5.4 Call waiting on the home line

If you subscribe to call waiting service with your telephone service provider, you hear a beep if someone calls while you are already on a call.

1. Press HOME/FLASH on the handset or FLASH on the telephone base to put your current call on hold and take the new call.
2. Press HOME/FLASH on the handset or FLASH on the telephone base at any time to switch back and forth between calls.

5.5 Make a Cell Call

You can make cell calls using a handset or the telephone base.

You can connect a maximum of two **Bluetooth** wireless technology enabled cell phones to the telephone base, but only one cell phone can be used on a cell call at a time.

If you only have one cell phone connected to the telephone base, it is automatically selected to make or answer cell calls. If you have two cell phones connected to the telephone base and on the active device list, the handset or telephone base prompts you to select a cell phone before you make a cell call.

5.5.1 Preparatory Dialing

Using a handset:

1. Enter the phone number. Press OFF CLEAR to clear the entry.
2. Press CELL to dial the number.

Using the base:

1. Enter the phone number. Press CANCEL to clear the entry.
2. Press CELL to dial the number.

5.5.2 Direct Dialing

Using a handset:

1. Press CELL to take the line and enter the phone number.
2. Press **DIAL** to dial out.

Using the base:

1. Press CELL to take the line and enter the phone number.
2. Press **DIAL** to dial out.

5.5.3 Call from the phonebook

Using a handset:

1. Press VOL+ to access the phonebook list.
2. Press VOL+ / CID VOL- to select the desired phonebook entry.
3. Press CELL to dial out to the selected phonebook entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** to select REVIEW, and then press **SELECT**.
3. Press VOL+ / VOL- to select the desired phonebook entry.
4. Press CELL to dial out to the selected phonebook entry.

5.5.4 Call from the Call Log

Using a handset:

1. Press CID VOL- to access the call log.
2. Press VOL+ / CID VOL- to select the desired call log entry.
3. Press CELL to dial out to the selected call log entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG.
2. Press **SELECT** to select REVIEW, and then press **SELECT**.
3. Press VOL+ / VOL- to select the desired call log entry.
4. Press CELL to dial out to the selected call log entry.

5.5.5 Call from the redial list

Using a handset:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / CID VOL- to select the desired redial entry.
3. Press CELL to dial out to the selected redial entry.

Using the base:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / VOL- to select the desired redial entry.
3. Press CELL to dial out to the selected redial entry.

Note:
Your handset or base automatically times the duration of every call. The call timer will display a few seconds after the call has been made. It is shown in hours, minutes and seconds format (HH:MM:SS).

5.6 Answer a Cell Call

Using a handset:

When the phone rings, press CELL or to answer a call.

Using the base:

When the phone rings, press CELL to answer a call.

5.7 End a Cell Call

Using a handset:
During a call connection, press CELL or put the handset on the base to end the call.

Using the base:
During a call connection, press CELL to end the call.

5.8 Call waiting on the cell line

If you subscribe to call waiting service with your cell phone service provider, you hear a beep if someone calls while you are already on a call.

1. Press the **SWAP** on the handset or base.
2. Press the **OPTION** and then the **SWAP** to switch back and forth between calls.

5.9 Answer a cell call while on a home call

While you are on a home call and there is an incoming cell call, 1 or 2 displays on the handset and telephone base and the telephone rings.

Using a handset:

1. To answer the incoming cell call, press CELL on the handset. The home call is automatically placed on hold and "HOME CALL ON HOLD" appears on the handset.
2. To end the cell call, press OFF CLEAR on the handset. The home line is still on hold.
3. To resume the home call on hold, press HOME FLASH on the handset.

Using the base:

1. To answer the incoming cell call, press CELL on the base. The home call is automatically placed on hold and "HOME CALL ON HOLD" appears on the base.
2. To end the cell call, press CELL on the base. The home line is still on hold.
3. To resume the home call on hold, press HOME on the base

5.10 Answer a home call while on a cell call

While you are on a cell call and there is an incoming home call, appears on the handset and telephone base and the telephone rings.

Using a handset:

1. To answer the incoming home call, press HOME/FLASH on the handset. The cell call is automatically placed on hold and "CELL CALL ON HOLD" appears on the handset.
2. To end the home call, press OFF/CLEAR on the handset. The cell line is still on hold.
3. To resume the cell call on hold, press CELL on the handset.

Using the base:

1. To answer the incoming home call, press HOME on the base. The cell call is automatically placed on hold and "CELL CALL ON HOLD" appears on the base.
2. To end the home call, press HOME on the base. The cell line is still on hold.
3. To resume the cell call on hold, press CELL on the base.

5.11 Conference home and cell calls

When you have calls established on the home and cell lines, you can create a 3-way conference using the handset or telephone base.

Using a handset:

During a home call or cell call:

1. Press **OPTION** on the handset.
2. Press VOL+ / CID VOL- to select CONF. WITH HOME or CONF. WITH CELL.
3. Press **SELECT** to establish the conference call.
4. Press OFF/CLEAR on the handset to end the call.

During a conference call:

1. Press **OPTION** on the handset.
2. Press VOL+ / CID VOL- to select END HOME CALL or END CELL CALL
3. Press **SELECT** to go back to a home call or cell call.

Using the base:
During a home call or cell call:

1. Press **OPTION** on the base.
2. Press VOL+ / VOL- to select CONF. WITH HOME or CONF. WITH CELL.
3. Press **SELECT** to establish the conference call.
4. Press HOME or CELL on the base to end the call.

During a conference call:

1. Press **OPTION** on the base.
2. Press VOL+ / VOL- to select END HOME CALL or END CELL CALL.
3. Press **SELECT** to go back to a home call or cell call.

5.12 Chain Dialing

Use this feature to initiate a dialing sequence from numbers stored in the phonebook, call log or redial while you are on a home call. This feature is available only for home calls.
Chain dialing can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the phonebook, call log or redial list.

5.12.1 Access a Number in the Phonebook on a Home Call

Using a handset:

1. Press **OPTION** and VOL+ / CID VOL- to select PHONEBOOK.

2. Press **SELECT** and VOL+ / CID VOL- to select the desired entry.
3. Press **DIAL** to dial the selected number.

Using the base:

1. Press **OPTION** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select the desired entry.
3. Press **DIAL** to dial the selected number.

5.12.2 Access a Number in the Call Log on a Home Call

Using a handset:

1. Press **OPTION** and VOL+ / CID VOL- to select CALL LOG.
2. Press **SELECT** and VOL+ / CID VOL- to select the desired entry.
3. Press **DIAL** to dial the selected number.

Using the base:

1. Press **OPTION** and VOL+ / VOL- to select CALL LOG.
2. Press **SELECT** and VOL+ / VOL- to select the desired entry.
3. Press **DIAL** to dial the selected number.

5.12.3 Access the Last Number Redial on a Home Call

Using a handset:

1. Press **OPTION** and VOL+ / CID VOL- to select REDIAL LAST #.
2. Press **SELECT** to select the last redial entry.
3. Press **DIAL** to dial the number.

Using the base:

1. Press **OPTION** and VOL+ / VOL- to select REDIAL LAST #.
2. Press **SELECT** to select the last redial entry.
3. Press **DIAL** to dial the number.

5.13 Adjust Earpiece and Handsfree Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece and handsfree volume in the handset, while there are 8 levels (VOLUME 1 to VOLUME 8) to choose for handsfree volume in the base.

Using a handset:
During a call:
Press VOL+ / CID VOL- to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

Using the base:
During a call:
Press VOL+ / VOL- to select volume 1-8. The current setting is shown. When you end the call, the setting will remain at the last selected level.

5.14 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.

Using a handset:
During a call:

Press **MUTE** to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press **UNMUTE** to unmute the microphone.

Using the base:
During a call:

Press **MUTE** to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press **UNMUTE** to unmute the microphone.

5.15 Infrared sensor

This feature prevents you from pressing the keys accidentally while you are using the handset during a call.

When you put the earpiece of the handset next to your ear or the infrared sensor is covered during a call, all keys on the dial pad are disabled.

5.16 Hold a Call

You can place a home or cell call on hold. You will hear an alert tone if you have not taken the call off of hold after 14 minutes. You will hear another alert tone 30 seconds later. At 15 minutes on hold, the call on hold automatically disconnects.

Using a handset:
During a home call:

1. Press HOLD on the handset. "HOME CALL ON HOLD" appears, HOME FLASH on the handset flashes.
2. To resume a home call on hold, press HOME FLASH on the handset.

During a cell call:

1. Press HOLD on the handset. "CELL CALL ON HOLD" appears, CELL on the handset flashes.
2. To resume a cell call on hold, press CELL on the handset.

Using the base:
During a home call:

1. Press HOLD on the base. "HOME CALL ON HOLD" appears, HOME on the base flashes.
2. To resume a home call on hold, press HOME on the base.

During a cell call:

1. Press HOLD on the handset. "CELL CALL ON HOLD" appears, CELL on the base flashes.
2. To resume a cell call on hold, press CELL on the base.

5.17 Set the Silent Mode

Using a handset:

When the handset rings, press **SILENCE** or OFF CLEAR to turn off the handset ringer. The icon is displayed on the LCD.

Using the base:

When the base rings, press **SILENCE** or CANCEL to turn off the handset ringer. The icon is displayed on the LCD.

5.18 Keypad Lock/Unlock

You can turn on the keypad lock of a handset.

In idle mode, press * and then **LOCK** to turn on the keypad lock. "PRESS UNLOCK TO USE KEYS" is displayed on the LCD.

In keypad lock mode, press **UNLOCK** to turn off the keypad lock.

5.19 Redial the last number

You can redial up to 20 of the last numbers called. The most recent last number will display at the top of the redial list.

5.19.1 Redial a Number from the Redial List

Using a handset:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / CID VOL- to select the desired entry.
3. Press HOME FLASH or to dial the number using the home line.

   OR

   Press CELL to dial the number using the cell line.

Using the base:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / VOL- to select the desired entry.
3. Press HOME to dial the number using the home line.

   OR

   Press CELL to dial the number using the cell line.

5.19.2 Store a Redial Number into the Phonebook

Using a handset:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / CID VOL- to select the desired entry.
3. Press **OPTION** and VOL+ / CID VOL- to select STORE.
4. Press **SELECT** to edit the number.

Note:
You can press **PAUSE** to insert a pause.

5. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

6. Press **SAVE** to confirm.

Using the base:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / VOL- to select the desired entry.
3. Press **OPTION** and VOL+ / VOL- to select STORE.
4. Press **SELECT** to edit the number.

Note:
You can press **PAUSE** to insert a pause.

5. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

6. Press **SAVE** to confirm.

5.19.3 Delete a Redial Number

Using a handset:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / CID VOL- to select the desired entry.
3. Press **OPTION** and VOL+ / CID VOL- to select DELETE.
4. Press **SELECT** to delete.

Using the base:

1. Press **REDIAL** to access the redial list.
2. Press VOL+ / VOL- to select the desired entry.
3. Press **OPTION** and VOL+ / VOL- to select DELETE.
4. Press **SELECT** to delete.

5.20 Find the Handset

This feature helps you find a misplaced handset.

1. Press **MENU** and VOL+ / CID VOL- on the base to select PAGE ALL HS.
2. Press **SELECT** to page and all handsets registered to the base will ring.
3. Press any dialing key, HOME FLASH or 🔈 on the handset or **STOP** on the base to stop paging.

5.21 Intercom and Conference Call

This feature allows you to make internal calls, transfer external calls and make conference calls.

5.21.1 Intercom

Using a handset:

1. Press **MENU** and VOL+ / CID VOL- on the handset to select INTERCOM.
2. Press **SELECT** and VOL+ / CID VOL- to select the base or the desired handset you want to intercom with.
3. Press **SELECT**, and the called base or handset will ring.
4. Press HOME on the called base to answer the call.

   OR

   Press HOME FLASH or 🔈 on the called handset to answer the call.

Using the base:

1. Press **MENU** and VOL+ / VOL- on the base to select INTERCOM.
2. Press **SELECT** and VOL+ / VOL- to select the desired handset you want to intercom with.
3. Press **SELECT**, and the called handset will ring.
4. Press HOME FLASH or 🔈 on the called handset to answer the call.

5.21.2 Transfer an External Call

Using a handset:

During an external call:

1. Press **OPTION** to select INTERCOM.
2. Press **SELECT** and VOL+ / CID VOL- to select the base or the desired handset you want to intercom with.
3. Press **SELECT**. The external call is put on hold automatically and the called base or handset rings.
4. Press HOME FLASH or on the called handset to answer the call.

   OR

   Press HOME on the called base to answer the call.
5. Press OFF CLEAR on the calling handset to end the call, and the external call will be transferred to the called base or handset automatically.

Using the base:

During an external call:

1. Press **OPTION** to select INTERCOM.
2. Press **SELECT** and VOL+ / VOL- to select the desired handset you want to intercom with.
3. Press **SELECT**. The external call is put on hold automatically and the called handset rings.
4. Press HOME FLASH or on the called handset to answer the call.
5. Press HOME on the calling base to end the call, and the external call will be transferred to the called handset automatically.

5.21.3 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two internal parties (in intercom). The three parties can share the conversation and no network subscription is required.

Using a handset:

During an external call:

1. Follow steps from 1 to 4 in Section 5.21.2.
2. Press **OPTION** on the calling handset to select CONFERENCE.
3. Press **SELECT** to initiate the 3-way conference call.

Note:
During the conference call, any internal party hangs up to leave the conference, it will leave the other one still in connection with the external call.

Using the base:

1. Follow steps from 1 to 4 in Section 5.21.2.
2. Press **OPTION** on the calling base to select CONFERENCE.
3. Press **SELECT** to initiate the 3-way conference call.

Note:
During the conference call, any internal party hangs up to leave the conference, it will leave the other one still in connection with the external call.

5.21.4 Switch between internal call and external call

Using a handset:

During a conference call:

1. Press **OPTION** on the calling handset to select SINGLE, and then press **SELECT**. The calling handset will connect to the external call and the internal call is put on hold.
2. To switch to the internal call, press **OPTION** and VOL+ / CID VOL- on the calling handset to select BROKERING, and then press **SELECT**.
3. To switch back to the external call, press **OPTION** and VOL+ / CID VOL- on the calling handset to select BROKERING again, and then press **SELECT**.

Note:
Any time when you on an internal call or external call switched from a conference call, you can press **OPTION** on the calling handset to select CONFERENCE and then press **SELECT** to establish the conference call again.

Using the base:

During a conference call:

1. Press **OPTION** on the calling base to select SINGLE, and then press **SELECT**. The calling base will connect to the external call and the internal call is put on hold.
2. To switch to the internal call, press **OPTION** and VOL+ / VOL- on the calling base to select BROKERING, and then press **SELECT**.
3. To switch back to the external call, press **OPTION** and VOL+ / VOL- on the calling base to select BROKERING again, and then press **SELECT**.

Note:
Any time when you on an internal call or external call switched from a conference call, you can press **OPTION** on the calling base to select CONFERENCE and then press **SELECT** to establish the conference call again.

6 PRIVATE PHONEBOOK

Your phone phonebook consists of a home phonebook and up to four downloaded phonebooks. The home phonebook stores up to 100 private entries with up to 30 digits for each phone number and 15 characters for each name. Each of the downloaded phonebook stores up to 1,500 entries with up to 30 digits for each phone number and 15 characters for each name. Phonebook entries are stored alphabetically by name.

6.1 Add a New Phonebook Entry

Using a handset:

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** to select HOME.
3. Press **SELECT** and VOL+ / CID VOL- to select STORE.
4. Press **SELECT** to enter the number.

Note:
You can press **PAUSE** to insert a pause.

5. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

6. Press **SAVE** to save the entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** to select HOME.
3. Press **SELECT** and VOL+ / VOL- to select STORE.
4. Press **SELECT** to enter the number.

Note:
You can press **PAUSE** to insert a pause.

5. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

6. Press **SAVE** to save the entry.

6.2 View a Phonebook Entry

Using a handset:

1. Press VOL+ to access the phonebook.
2. Press VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.

OR

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.

Note:
You will be requested to enter the PIN code to access the PIN-protected downloaded phonebook.

6.3 Edit a Phonebook Entry

You may edit any phonebook entry. However, be aware that if you download from a mobile phone again, the phonebook will be erased and replaced with the current mobile phone phonebook. If you have edited the downloaded entries on LS6245, those changes will be lost. To avoid losing changes made to the downloaded phonebook, we suggest you edit the number in your mobile phone, then download the phonebook.

Using a handset:

1. Press VOL+ to access the phonebook.
2. Press VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
4. Press **EDIT** to edit the number.
5. 5. Press **NEXT** to edit the name.
6. 6. Press **SAVE** to confirm.

OR

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
5. Press **EDIT** to edit the number.
6. Press **NEXT** to edit the name.
7. Press **SAVE** to confirm.

Note:
You can press * to toggle between upper and lower case.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
5. Press **EDIT** to edit the number.
6. Press **NEXT** to edit the name.
7. Press **SAVE** to confirm.

Note:
You can press * to toggle between upper and lower case.

6.4 Delete a Phonebook Entry

Using a handset:

1. Press VOL+ to access the phonebook.
2. Press VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
4. Press **DELETE** to delete the entry.

   OR

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / CID VOL- to select HOME phonebook or a downloaded phonebook.

3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / CID VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
5. Press **DELETE** to delete the entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select HOME phonebook or a downloaded phonebook.
3. Press **SELECT** to select REVIEW.
4. Press **SELECT** and VOL+ / VOL- to browse the entries. You can also enter the first character of your desired name of the phonebook entry by multi-tap to search the entry.
5. Press **DELETE** to delete the entry.

Note:
Once a phonebook entry is deleted, it cannot be retrieved.

6.5 Remove a downloaded phonebook (for downloaded phonebook only)

Using the handset:

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / CID VOL- to select the desired downloaded phonebook.
3. Press **SELECT** and VOL+ / CID VOL- to select REMOVE PB.
4. Press **SELECT**.
5. Press **SELECT** to confirm.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select the desired downloaded phonebook.
3. Press **SELECT** and VOL+ / VOL- to select REMOVE PB.
4. Press **SELECT**.
5. Press **SELECT** to confirm.

Note:
You will be requested to enter the PIN code to access the PIN-protected downloaded phonebook.

6.6 Security PIN for downloaded phonebook

This feature allows you to set your security PIN to protect your downloaded phonebooks, if you set the Security ON, you must enter the correct 4-digit PIN when you want to access your downloaded phonebooks.

Using the handset:

1. Press **MENU** and VOL+ / CID VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / CID VOL- to select the desired downloaded phonebook.
3. Press **SELECT** and VOL+ / CID VOL- to select SECURITY.
4. Press **SELECT** and VOL+ / CID VOL- to select ON or OFF.
5. Press **SELECT** and then use the keypad to enter 4-digit PIN if you select ON.
6. Repeat step 5 to enter the 4-digit PIN again.
7. Press **SELECT** to confirm.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select PHONEBOOK.
2. Press **SELECT** and VOL+ / VOL- to select the desired downloaded phonebook.

3. Press **SELECT** and VOL+ / VOL- to select SECURITY.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **SELECT** and then use the keypad to enter 4-digit PIN if you select ON.
6. Repeat step 5 to enter the 4-digit PIN again.
7. Press **SELECT** to confirm.

Note:
Each mobile downloaded phonebook can be protected by a separate PIN. After setting the security PIN, you will be requested to enter the correct PIN to access the protected downloaded phonebook.

7. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Caller Line Identification service with your network service provider. Your phone can store up to 100 received calls with date/time information in the Call Log. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number.

If the caller number is disabled to send caller information, "WITHHELD" will display.
If the caller number is not provided, "OUT OF AREA" will display.
In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed.

7.1 View the Call Log

All received calls are saved in Call Log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call.

Using a handset:

1. Press CID / VOL- to access the call log.

   OR

   Press **MENU** and VOL+ / CID / VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.
2. Press VOL+ / CID / VOL- to view the entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.
2. Press VOL+ / VOL- to view the entry.

7.2 Store a Call Log Number into the Phonebook

Using a handset:

1. Press CID / VOL- to access the call log.

   OR

   Press **MENU** and VOL+ / CID / VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.

2. Press VOL+ / CID VOL- to select the desired entry.
3. Press **SAVE** to edit the number.
4. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

5. Press **SAVE** to confirm.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.
2. Press VOL+ / VOL- to select the desired entry.
3. Press **SAVE** to edit the number.
4. Press **NEXT** to enter the name.

Note:
You can press * to toggle between upper and lower case.

5. Press **SAVE** to confirm.

7.3 Delete an entry in the Call Log

Using a handset:

1. Press CID VOL- to access the call log.

   OR

   Press **MENU** and VOL+ / CID VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.
2. Press VOL+ / CID VOL- to select the desired entry.
3. Press **DELETE** to delete the entry.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG, and then press **SELECT** to select REVIEW. Press **SELECT** to access the call log.
2. Press VOL+ / VOL- to select the desired entry.
3. Press **DELETE** to delete the entry.

7.4 Delete the entire list of the Call Log

Using a handset:

1. Press **MENU** and VOL+ / CID VOL- to select CALL LOG.
2. Press **SELECT** and VOL+ / CID VOL- to select DEL ALL CALLS.
3. Press **SELECT** to confirm.
4. Press **YES** to reconfirm, or press **NO** to cancel.

Using the base:

1. Press **MENU** and VOL+ / VOL- to select CALL LOG.
2. Press **SELECT** and VOL+ / VOL- to select DEL ALL CALLS.
3. Press **SELECT** to confirm.
4. Press **YES** to reconfirm, or press **NO** to cancel.

8. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

Using a handset:

8.1 Set the Audio

In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls to the home and cell lines.

8.1.1 Set the Ringer Volume

1. Press **MENU** and VOL+ / CID VOL- to select AUDIO.
2. Press **SELECT** to select RINGER VOLUME.
3. Press **SELECT** and VOL+ / CID VOL- to select HOME, CELLULAR 1, CELLULAR 2 or ALL HOME & CELL.
4. Press **SELECT** and VOL+ / CID VOL- to select the desired volume level (a total of 6 ringer volume levels), or press **OFF** to turn the ringer off.

Note:
The respective ringer volume will be played during your selection.

5. Press **OK** to confirm.

Note:
When the ringer volumes for all are set to off or the lowest level, a ringer off icon appears. When only one or two of the ringer volume is off or set to the lowest level, a ringer off icon flashes.

8.1.2 Set the Ringer Tone

1. Press **MENU** and VOL+ / CID VOL- to select AUDIO.
2. Press **SELECT** and VOL+ / CID VOL- to select RINGER TONE.
3. Press **SELECT** and VOL+ / CID VOL- to select HOME, CELLULAR 1, CELLULAR 2 or ALL HOME & CELL.
4. If you selected HOME, press **SELECT** and VOL+ / CID VOL- to select EXTERNAL or INTERNAL.
5. Press **SELECT** and VOL+ / CID VOL- to select the desired melody.

6. Press **OK** to confirm.

Note:
The respective ringer melody will be played while browsing the melody list.

8.1.3 Set the Key Tone

A single beep is emitted when you press a key. You can turn on or off the key tone.

1. Press **MENU** and to select AUDIO.
2. Press **SELECT** and to select KEY TONE.
3. Press **SELECT** and  to select ON or OFF.
4. Press **OK** to confirm.

8.1.4 Set the Low battery tone

1. Press **MENU** and to select AUDIO.
2. Press **SELECT** and to select LOW BATTERY.
3. Press **SELECT** and to select ON or OFF.
4. Press **OK** to confirm.

8.1.5 Set the No Coverage Tone

1. Press **MENU** and to select AUDIO.
2. Press **SELECT** and to select NO COVERAGE.
3. Press **SELECT** and to select ON or OFF.
4. Press **OK** to confirm.

8.2 Set the Date and Time

You will need to set the correct time and date so that you know when you received call log entries.

8.2.1 Change the Date Format

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select DATE FORMAT.
3. Press **SELECT** and VOL+ / CID VOL- to select DD/MM/YY or MM/DD/YY.
4. Press **OK** to confirm.

8.2.2 Change the Time Format

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select TIME FORMAT.
3. Press **SELECT** and VOL+ / CID VOL- to select 12 - HOUR or 24 - HOUR.
4. Press **OK** to confirm.

8.2.3 Set Date/Time

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** to select SET DATE/TIME, and then press **SELECT**.
3. Enter the date by the keypad, using the date format you set in Section 8.2.1.

   OR

   Press VOL+ / CID VOL- until the screen displays the correct value. Press **OK** to advance.

4. Press **OK** to enter the time by the keypad, using the time format you set in Section 8.2.2.

   OR

   Press VOL+ / CID VOL- until the screen displays the correct value. Press **OK** to advance.

5. Press **OK** to confirm.

8.3 Set the Auto Keylock

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select AUTO KEYLOCK.
3. Press **SELECT** and VOL+ / CID VOL- to select the desired item.
4. Press **OK** to confirm.

8.4 De-register

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select DE-REGISTER.
3. Press **SELECT** to enter the system PIN. (Default is 0000)
4. Press **OK** and a list of registered handsets is displayed.
5. Press VOL+ / CID VOL- and **SELECT** to de-register a handset.
6. Press **YES** to reconfirm or **NO** to cancel.

Note:
You cannot de-register the handset that you are currently using.

8.5 Set the Dial Mode

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select DIAL MODE.
3. Press **SELECT** and VOL+ / CID VOL- to select TONE or PULSE.
4. Press **OK** to confirm.

8.6 Set the Flash Time

The flash time settings is country dependent. Please contact your local service provider for the correct settings.

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select FLASH TIME.
3. Press **SELECT** and VOL+ / CID VOL- to select the desired item.
4. Press **OK** to confirm.

8.7 Set the ECO Mode Range

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select ECO MODE RANGE.
3. Press **SELECT** and VOL+ / CID VOL- to select HALF RANGE or FULL RANGE.
4. Press **OK** to confirm.

8.8 Change the System PIN

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select SYSTEM PIN.
3. Press **SELECT** to enter the old system PIN. (Default is 0000)

Note:
If the old system PIN is wrong, you will hear an error tone and be asked to enter it again.

4. Press **OK** to enter the four-digit new system PIN.
5. Press **OK** to enter the four-digit new system PIN again.
6. Press **OK** to confirm.

Note:
If the new PIN entered in Step 5 is not matched with the new system PIN entered in Step 4, user is requested to enter the old system PIN again in Step 3.

8.9 Reset the handset

1. Press **MENU** and VOL+ / CID VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / CID VOL- to select RESET.
3. Press **SELECT** to enter the four-digit system PIN. (Default is 0000)
4. Press **OK** to confirm.
5. Press **YES** to reconfirm, or press **NO** to cancel.

Using the base:

8.10 Set the Audio

In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls to the home and cell lines.

8.10.1 Set the Ringer Volume

1. Press **MENU** and VOL+ / VOL- to select AUDIO.
2. Press **SELECT** to select RINGER VOLUME.
3. Press **SELECT** and VOL+ / VOL- to select HOME, CELLULAR 1, CELLULAR 2 or ALL HOME & CELL.
4. Press **SELECT** and VOL+ / VOL- to select the desired volume level (a total of 6 ringer volume levels), or press **OFF** to turn the ringer off.

Note:
The respective ringer volume will be played during your selection.

5. Press **OK** to confirm.

Note:
When the ringer volumes for all are set to off or the lowest level, a ringer off icon appears. When only one or two of the ringer volume is off or set to the lowest level, a ringer off icon flashes.

8.10.2 Set the Ringer Tone

1. Press **MENU** and VOL+ / VOL- to select AUDIO.
2. Press **SELECT** and VOL+ / VOL- to select RINGER TONE.
3. Press **SELECT** and VOL+ / VOL- to select HOME, CELLULAR 1, CELLULAR 2 or ALL HOME & CELL.
4. If you selected HOME, press **SELECT** and VOL+ / VOL- to select EXTERNAL or INTERNAL.
5. Press **SELECT** and VOL+ / VOL- to select the desired melody.
6. Press **OK** to confirm.

Note:
The respective ringer melody will be played while browsing the melody list.

8.10.3 Set the Key Tone

A single beep is emitted when you press a key. You can turn on or off the key tone.

1. Press **MENU** and VOL+ / VOL- to select AUDIO.
2. Press **SELECT** and VOL+ / VOL- to select KEY TONE.
3. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
4. Press **OK** to confirm.

8.11 Set the Date and Time

You will need to set the correct time and date so that you know when you received call log entries.

8.11.1 Change the Date Format

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select DATE FORMAT.
3. Press **SELECT** and VOL+ / VOL- to select DD/MM/YY or MM/DD/YY.
4. Press **OK** to confirm.

8.11.2 Change the Time Format

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select TIME FORMAT.
3. Press **SELECT** and VOL+ / VOL- to select 12 - HOUR or 24 - HOUR.
4. Press **OK** to confirm.

8.11.3 Set Date/Time

1. Press **MENU** and ^ VOL+ / VOL- v to select SETTINGS.
2. Press **SELECT** to select SET DATE/TIME, and then press **SELECT**.
3. Enter the date by the keypad, using the date format you set in Section 8.11.1.

   OR

   Press ^ VOL+ / VOL- v until the screen displays the correct value. Press **OK** to advance.
4. Press **OK** to enter the time by the keypad, using the time format you set in Section 8.11.2.

   OR

   Press ^ VOL+ / VOL- v until the screen displays the correct value. Press **OK** to advance.
5. Press **OK** to confirm.

8.12 De-register

1. Press **MENU** and ^ VOL+ / VOL- v to select SETTINGS.
2. Press **SELECT** and ^ VOL+ / VOL- v to select DE-REGISTER.
3. Press **SELECT** to enter the system PIN. (Default is 0000)
4. Press **OK** and a list of registered handsets is displayed.
5. Press ^ VOL+ / VOL- v and **SELECT** to de-register a handset.
6. Press **YES** to reconfirm or **NO** to cancel.

8.13 Set the Dial Mode

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select DIAL MODE.
3. Press **SELECT** and VOL+ / VOL- to select TONE or PULSE.
4. Press **OK** to confirm.

8.14 Set the Flash Time

The flash time settings is country dependent. Please contact your local service provider for the correct settings.

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select FLASH TIME.
3. Press **SELECT** and VOL+ / VOL- to select the desired item.
4. Press **OK** to confirm.

8.15 Set the ECO Mode Range

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select ECO MODE RANGE.
3. Press **SELECT** and VOL+ / VOL- to select HALF RANGE or FULL RANGE.
4. Press **OK** to confirm.

8.16 Change the System PIN

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select SYSTEM PIN.
3. Press **SELECT** to enter the old system PIN. (Default is 0000)

Note:
If the old system PIN is wrong, you will hear an error tone and be asked to enter it again.

4. Press **OK** to enter the four-digit new system PIN.
5. Press **OK** to enter the four-digit new system PIN again.
6. Press **OK** to confirm.

Note:
If the new PIN entered in Step 5 is not matched with the new system PIN entered in Step 4, user is requested to enter the old system PIN again in Step 3.

8.17 Reset the base

1. Press **MENU** and VOL+ / VOL- to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select RESET.
3. Press **SELECT** to enter the four-digit system PIN. (Default is 0000)
4. Press **OK** to confirm.
5. Press **YES** to reconfirm, or press **NO** to cancel.

9. REGISTRATION

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.
If for some reason, the handset is not registered to the base station ("NOT REGISTERED" displays in the handset screen), register your handset according to the following procedures.

Using a handset:

1. Put the handset on the base, "PRESS HOLD ON BASE FOR 4 SEC" will display in the handset screen.

Or use your handset menu.

1. Press **MENU** and VOL+ / VOL- on the handset to select SETTINGS.
2. Press **SELECT** and VOL+ / VOL- to select REGISTER.
3. Press **SELECT** to enter the system PIN. (Default is 0000)
4. Press **OK** and go ahead with the following procedures using the base.

Using the base:

5. Press and hold HOLD on the base for about four seconds until the telephone base displays “REGISTERING HANDSET...”. The handset shows “HANDSET X REGISTERED” (X represents the handset number assigned) and you hear a beep when the registration completes.

Note:
If the registration fails, "NO BASE FOUND" displays in the handset screen and then "TO REGISTER, PICK UP HANDSET FROM CHARGER" displays. Try the registration process again.

You cannot register a handset if any other system handset is in use.

10. ANSWERING MACHINE

The answering system can record and store up to 99 messages. You can set a desired recording time for messages. The total storage capacity for the announcements, messages and memos is approximately 25 minutes. The actual recording time depends on individual message characteristics.

You can switch the answering machine ON or OFF. When it is ON, select between ANSWER & RECORD mode or ANSWER ONLY mode.

The Answer and Record mode allows a caller to leave a message, and is set when ANSWER & RECORD is selected.

The Answer Only mode does not allow a caller to leave a message, and is set when ANSWER ONLY is selected.

The answering machine is supplied with pre-recorded announcements for ANSWER & RECORD mode and ANSWER ONLY mode, but you can record your own personal announcements if you wish.

When the answering machine is ON, it will answer after a set number of rings (default is 6 Rings).

When the answering machine is OFF, or if the memory is full, it will answer after 10 rings, which allows remote access if required.

Using a handset:

10.1 Switching Answering Machine On/Off

When you turn the answering machine ON, the will display in handset and base screen.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / CID VOL- to select ANS SYS SETUP.
3. Press **SELECT** to select ANSWER ON / OFF.
4. Press **SELECT** and VOL+ / CID VOL- to select ON or OFF.
5. Press **OK** to confirm.

Note:
If you select OFF to switch the Answering Machine off. The icon will disappear.

10.2 Announcement

This is the message your callers hearing on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

10.2.1 Record your own announcement

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP
3. Press **SELECT** and VOL+ / VOL- to select ANNOUNCEMENT.
4. Press **SELECT** and VOL+ / VOL- to select RECORD
5. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
6. Press **SELECT**, then the system will prompt you to start record your announcement after a beep.
7. Press **SAVE** to save and the recorded announcement will automatically play.
8. Press **STOP** to stop the playback. Or press **DELETE** to delete your recorded announcement.

10.2.2 Playback the announcement

You can play the announcement in the handset or base.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP
3. Press **SELECT** and VOL+ / VOL- to select ANNOUNCEMENT.
4. Press **SELECT** to select PLAY.
5. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
6. Press **SELECT** to confirm and the announcement will automatically play.

10.2.3 Delete the recorded announcement

You can delete the recorded announcement message to set the default announcement message back through your handset as below.

1. Follow steps from 1 to 6 in Section 10.2.2.
2. Press **DELETE** to delete the recorded announcement. And the announcement message will be reset to default.

Note:
You can't delete the default announcement.

10.3 Answering machine message

If you have new messages, the base screen light will turn on and e.g. "3 NEW MESSAGES" will flash in base screen, which means you have 3 new messages in your answering machine. And the will display on your base and handset screen. You can press **OFF** on the base to turn off the base screen light. When the answering machine is playing message, the base screen will display "PLAYING MESSAGE MESSAGE [X / Y]" which prompts you which message is playing and how many messages in your answering machine.

10.3.1 Play messages

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** to select PLAY MSGS.
3. Press **SELECT** to play messages.

Options during playback:

- Press VOL+ / CID VOL- to adjust the speaker volume.
- Press 6 mno to skip to next message.
- Press 4 ghi to repeat the message currently playing. Press 4 ghi twice to listen to the previous message.
- Press 2 abc to stop the message playback and return to the previous menu.
- Press 5 jkl to delete the current message. The system advances to the next message.
- Press **BACK** to exit and return to the previous menu.

Note:

- The first received new message will be played first and then the second received new message will be played and so on (if more than one new message is received).
- Old messages will be played automatically after all new messages are played.
- When all messages are played, it will go back to the previous screen.

10.3.2 Delete a message

When your handset is playing a message, you can press 5 jkl to delete the current message.

10.3.3 Delete all old messages

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / CID VOL- to select DEL ALL OLD.
3. Press **SELECT** to confirm.
4. Press **YES** to reconfirm. Or press **NO** to return to previous screen.

Note:
You cannot delete the new messages, so you will have to review them before trying to delete them.

10.4 Record a memo

This allows users to record a memo. Newly recorded memos are counted as new messages.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / CID VOL- to select RECORD MEMO.
3. Press **SELECT** to start to record your memos after you heard a beep.
4. Press **SAVE** to save it. And the recorded memo is automatically playing,
5. Press **DELETE** to delete the memo. Or press **STOP** to stop the memo playback.

10.5 Incoming Call Messages (ICM)

If the answering machine is ON and set for ANSWER & RECORD, when there is an incoming call, the answering machine will answer it and play the pre-set announcement message, followed by a beep sound. The caller can then leave a message. The caller's voice will also be played through the loudspeaker to allow you to screen the call and decide if you want to leave the answering machine to record the message, or if you want to talk to the caller directly.

At any time if you want to pick up the call, you can press HOME/FLASH or on the handset or press HOME on the base to intercept the call and talk to the caller directly. The message recording will be stopped automatically. If the answering machine is in the process of recording, the message already recorded will be saved.

10.6 Answering Machine Settings

10.6.1 Set answer mode

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select ANSWER MODE.
4. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
5. Press **OK** to confirm.

10.6.2 Set number of rings to answer

You can set the answer delay to 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER, e.g. if you set the answer delay to 2 RINGS, your answering machine will answer the call after the caller hearing two rings.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select ANSWER DELAY.
4. Press **SELECT** and VOL+ / VOL- to select 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER.
5. Press **OK** to confirm.

Note:
If the Time Saver setting is selected, the answering machine will pick up the call after two rings if there are new messages and after four rings if there is no new message.

10.6.3 Set the recording time of message

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP
3. Press **SELECT** and VOL+ / VOL- to select RECORDING TIME.
4. Press **SELECT** and VOL+ / VOL- to select 30 SECONDS, 60 SECONDS, 120 SECONDS or UNLIMITED.
5. Press **OK** to confirm.

10.6.4 Set call screening on or off

The call screening feature lets you listen to a caller leaving a message at the telephone base. You can turn this feature on or off with your handset.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select CALL SCREENING.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **OK** to confirm

10.6.5 Set answering machine message alert on or off

When the tone is turned on, you will hear this audible warning tone every 10 seconds if you have new messages.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select MSG ALERT TONE.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **OK** to confirm.

10.7 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another phone (with tone dialing).

1. If the answer machine is switched off, it will answer the call after 10 rings and allow the caller to switch the answer machine on, or check the messages from a remote location.
2. When you hear the announcement message, press * and then enter the 4-digit security code (The default 4-digit code is 0000)

   OR

   If the answer machine is switched on, when it is playing the announcement message, you can press * and then enter the correct remote access code to enter the remote access mode.
3. Press the following keys to carry out your desired function during message playback:

Keys	Description	
	During Message Playback	**Message is not playing**
1		Play remote access menu
2	Stop Message	Play message
4	Repeat playing the current message from the beginning. Press twice to skip backward to previous message.	
5	Delete Message	
6	Skip forward	
7		Turn answering machine on
9		Turn answering machine off
*		Enter the remote access code if the answering machine is on and during OGM is playing.

Using the base:

10.8 Switching Answering Machine On/Off

When you turn the answering machine ON, the will display in handset and base screen.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** to select ANSWER ON / OFF.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **OK** to confirm.

Note:
If you select OFF to switch the Answering Machine off. The icon will disappear.

10.9 Announcement

This is the message your callers hearing on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

10.9.1 Record your own announcement

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select ANNOUNCEMENT.
4. Press **SELECT** and VOL+ / VOL- to select RECORD.
5. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
6. Press **SELECT**, the system will prompt you to start record your announcement after a beep.
7. Press **SAVE** to save and the recorded announcement will automatically play.
8. Press ▶/■ to stop the playback. Or press FLASH × to delete your recorded announcement.

10.9.2 Playback the announcement

You can play the announcement in the handset or base.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select ANNOUNCEMENT.
4. Press **SELECT** to select PLAY.
5. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
6. Press **SELECT** to confirm and the announcement will automatically play.

10.9.3 Delete the recorded announcement

You can delete the recorded announcement message to set the default announcement message back through your base as below.

1. Follow steps from 1 to 6 in Section 10.9.2.
2. Press FLASH × to delete the recorded announcement. And the announcement message will be reset to default.

Note:
You can't delete the default announcement.

10.10 Answering machine message

If you have new messages, the base screen light will turn on and e.g. “3 NEW MESSAGES” will flash in base screen, which means you have 3 new messages in your answering machine. And the will display on your base and handset screen. You can press **OFF** on the base to turn off the base screen light. When the answering machine is playing message, the base screen will display “PLAYING MESSAGE MESSAGE [X / Y]” which prompts you which message is playing and how many messages in your answering machine.

10.10.1 Play messages

1. In idle, press ▶/■ on the base to listen to messages.

   Or using your base menu

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** to select PLAY MSGS.
3. Press **SELECT** to start playing back the messages from speakerphone.

Options during playback:

- Press VOL + / VOL - to adjust the speaker volume.
- Press CANCEL ◀◀ if you want to skip back to the previous message during message playback.
- Press ▶▶ if you want to skip forward to the next message during message playback.
- Press ▶/■ if you want to stop the message playback.
- Press FLASH ✕ to delete the currently playing message.

Note:

- The first received new message will be played first and then the second received new message will be played and so on (if more than one new message is received).
- Old messages will be played automatically after all new messages are played.
- When all messages are played, it will go back to the previous screen.

10.10.2 Delete a message

1. Press FLASH ✕ on the base while a message is playing.
2. The current message or memo playing will be deleted. If there are more messages, the next message will start to play.

10.10.3 Delete all old messages

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select DEL ALL OLD.
3. Press **SELECT** to confirm.
4. Press **YES** to confirm. Or press **NO** to return to previous screen.

Note:
You cannot delete the new messages, so you will have to review them before trying to delete them.

10.11 Record a memo

This allows users to record a memo. Newly recorded memos are counted as new messages.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select RECORD MEMO.
3. Press **SELECT** to start to record your memos after you heard a beep.
4. Press **SAVE** to save it. And the recorded memo is automatically playing,
5. Press FLASH to delete the memo. Or press ▶/■ to stop the memo playback.

Note:
If your recorded memo is saved in your answering machine, the base screen light will turn on and e.g. “1 NEW MESSAGE” flashing to prompt that you have 1 new message. Press **OFF** to turn off the base screen light.

10.12 Incoming Call Messages (ICM)

If the answering machine is ON and set for ANSWER & RECORD, when there is an incoming call, the answering machine will answer it and play the pre-set announcement message, followed by a beep sound. The caller can then leave a message. The caller's voice will also be played through the loudspeaker to allow you to screen the call and decide if you want to leave the answering machine to record the message, or if you want to talk to the caller directly.

At any time if you want to pick up the call, you can press HOME/FLASH or on the handset or press HOME on the base to intercept the call and talk to the caller directly. The message recording will be stopped automatically. If the answering machine is in the process of recording, the message already recorded will be saved.

10.13 Answering Machine Settings

10.13.1 Set answer mode

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP
3. Press **SELECT** and VOL+ / VOL- to select ANSWER MODE.
4. Press **SELECT** and VOL+ / VOL- to select ANSWER & RECORD or ANSWER ONLY.
5. Press **OK** to confirm.

10.13.2 Set number of rings to answer

You can set the answer delay to 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER, e.g. if you set the answer delay to 2 RINGS, your answering machine will answer the call after the caller hearing two rings.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select ANSWER DELAY.
4. Press **SELECT** and VOL+ / VOL- to select 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, and TIME SAVER.
5. Press **OK** to confirm.

Note:
If the Time Saver setting is selected, the answering machine will pick up the call after two rings if there are new messages, and after four rings if there is no new message.

10.13.3 Set the recording time of message

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select RECORDING TIME.
4. Press **SELECT** and VOL+ / VOL- to select 30 SECONDS, 60 SECONDS, 120 SECONDS and UNLIMITED.
5. Press **OK** to confirm.

10.13.4 Set call screening on or off

The call screening feature lets you listen to a caller leaving a message at the telephone base. You can turn this feature on or off with your telephone base.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP.
3. Press **SELECT** and VOL+ / VOL- to select CALL SCREENING.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **OK** to confirm

10.13.5 Set answering machine message alert on or off

When the tone is turned on, you will hear this audible warning tone every 10 seconds if you have new messages.

1. Press **MENU** to select ANS. SYSTEM.
2. Press **SELECT** and VOL+ / VOL- to select ANS SYS SETUP
3. Press **SELECT** and VOL+ / VOL- to select MSG ALERT TONE.
4. Press **SELECT** and VOL+ / VOL- to select ON or OFF.
5. Press **OK** to confirm.

10.14 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another phone (with tone dialing).

1. If the answer machine is switched off, it will answer the call after 10 rings and allow the caller to switch the answer machine on, or check the messages from a remote location.
2. When you hear the announcement message, press ✱ and then enter the 4-digit security code (The default 4-digit code is 0000)

   OR

   If the answer machine is switched on, when it is playing the announcement message, you can presscc ✱ and then enter the correct remote access code to enter the remote access mode.
3. Press the following keys to carry out your desired function during message playback:

Keys	Description	
	During Message Playback	**Message is not playing**
1		Play remote access menu
2	Stop Message	Play message
4	Repeat playing the current message from the beginning. Press twice to skip backward to previous message.	
5	Delete Message	
6	Skip forward	
7		Turn answering machine on
9		Turn answering machine off
*		Enter the remote access code if the answering machine is on and during OGM is playing.

11. DEFAULT SETTINGS

Default settings of handset	
Items	**Default Values**
Answer Machine	
Answer On/Off	On
Answer Mode	Answer & Record
Answer Delay	6 rings
Recording Time	120 seconds
Call Screening	On
Remote Access	Off
Remote Access PIN	0000
TAM Alert	Off
Sound	
Home Type (External) Melody	Melody 1
Home Type (Internal) Melody	Melody 1
Cellular 1 Melody	Melody 1
Cellular 2 Melody	Melody 1
All home & cell Type Melody	Melody 1
Ringer volume (Cellular 1, Cellular 2, Home, All home & cell)	Volume 4
Settings (Handset)	
Time Format	24 - Hour
Date Format	DD/MM/YY
Auto Keylock	Never
Key Tone	On

Default settings of base	
Items	**Default Values**
Bluetooth	
Bluetooth PIN	0000
Answer Machine	
Answer On/Off	On
Answer Mode	Answer & Record
Answer Delay	6 rings
Recording Time	120 seconds
Call Screening	On
Remote Access	Off
Remote Access PIN	0000
TAM Alert	Off
Sound	
Home Type (External) Melody	Tone 2
Home Type (Internal) Melody	Tone 2
Cellular 1 Melody	Tone 2
Cellular 2 Melody	Tone 2
All home & cell Type Melody	Tone 2
Ringer volume (Cellular 1, Cellular 2, Home, All home & cell)	Volume 4

Settings	
Time Format	24 - Hour
Date Format	DD/MM/YY
Dial Mode	Tone
Flash Time	600ms
ECO Mode Range	Full range
System PIN	0000
Key Tone	On

12. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Solutions
I cannot pair my cell phone to the telephone base.	• Make sure you have cellular coverage. • Make sure the **Bluetooth** function of your cell phone is turned on. See the user's manual of your cell phone for more information. • Remove **VTech LS6245** from your cell phone's handsfree device history list (see the user's manual of your cell phone for more information). • Carefully follow the pairing instructions on page 14 and make sure that your cell phone is not connected to any other **Bluetooth** wireless technology enabled device. • Turn off your cell phone, and then turn it on again. • Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, then plug it back in. Repeat the above suggestions.
I cannot pair my headset to the telephone base.	• Make sure that your **Bluetooth** wireless technology enabled headset is in discoverable mode when pairing with the telephone base. See the user's manual of your headset for more information on how to set your headset in discoverable mode. • Carefully follow the pairing instructions on page 15 and make sure that your headset is not connected to any other **Bluetooth** wireless technology enabled device. • Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, then plug it back in. Repeat the above suggestions.
I cannot connect my cell phone with the telephone base.	• Make sure that the **Bluetooth** function of your cell phone is turned on. See the user's manual of your cell phone for more information. • Make sure that your **Bluetooth** wireless technology enabled cell phone is not connected to any other **Bluetooth** wireless technology enabled device. • Turn off your cell phone, and then turn it on again. • Make sure that your cell phone is connected and on the active devices list. • For some cell phones, you must authorize **VTech LS6245** device in your cell phone's **Bluetooth** feature. See the user's manual of your cell phone for more information. • Manually connect your cell phone to **VTech LS6245**. Refer to the user's manual of your cell phone for more information.

I cannot connect my headset with the telephone base.	• Make sure that your **Bluetooth** wireless technology enabled headset is not connected to any other **Bluetooth** wireless technology enabled device. • Make sure that your headset is connected and on the active devices list.
My cell phone is connected to the telephone base, but I cannot make a cell call.	• Make sure that your cell phone is not in use when you are trying to make a cell call. • Make sure that your cell phone is compatible. • For some smartphones, make sure that the cellular function is turned on.
I cannot hear any audio on my telephone system when on a cell call.	• Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, then plug it back in. • Turn off your cell phone, and then turn it on again.
My telephone does not work at all.	• Make sure the battery pack is installed and charged correctly. For optimum daily performance, return the handset to the telephone base or charger after use. • Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch. • Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack. • Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize. • Charge the battery in the handset for up to 16 hours. If the battery is completely depleted, it can take up to 10 minutes to charge the handset before HANDSET X appears on the screen. • Remove and re-insert the battery pack. If that still does not work, it might be necessary to purchase a new battery pack. • Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.
Low battery shows on screen.	• Place the handset in the telephone base for recharging. • Remove and re-install the battery pack and use it until fully depleted, then recharge the handset in the telephone base for up to 16 hours. • If the above measures do not correct the problem, replace the battery pack.

The battery does not charge in the handset or the handset battery does not accept charge.	• Make sure the handset is placed in the telephone base correctly. The charge light on the handset should be on. • Remove and reinstall the battery pack, then charge for up to 16 hours. If the handset is in the telephone base but the charge light on the handset is not on, refer to **The CHARGE light is off** in this section. • If the battery is completely depleted, it can take up to 10 minutes to charge the handset before HANDSET X appears on the screen. • Purchase a new battery pack.
The CHARGE light is off.	• Clean the charging contacts on the handset and telephone base each month with a pencil eraser or a dry non-abrasive fabric. • Make sure the power adapter and telephone line cord are plugged in correctly and securely. • Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the handset and telephone base to reset.

There is interference during a telephone conversation. **My calls fade out when I am using the handset.**	• The handset may be out of range. Move it closer to the telephone base. • If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters. • Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet. • Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones. • If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector. • The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance. • Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service. Contact your telephone service provider (charges might apply). • If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider (charges may apply).
REGISTRATION FAILED appears on the handset.	• Only one handset can be registered at a time. If you have multiple handsets to register, please follow the instructions on page 63 for the first handset. Once a handset has been successfully registered, repeat the steps for each handset that needs to be registered. • Make sure that the telephone base and handset(s) are in idle mode when registering a handset. • Follow the steps on page 85 for the common cure for electronic equipment, then try again to register a handset.

The answering system does not record messages.	• Make sure the answering system is on. • When the answering machine memory is full, it does not record new messages until some old messages are deleted. • If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. It that solves the problem, consult your fax machine documentation for information on compatibility with answering systems.
The answering system does not respond to remote commands.	• Make sure your remote access code is correct. • Make sure you are calling from a touch-tone telephone. When dialing a number, there should be tones. If there are clicks, then it is not a touch-tone telephone and cannot activate the answering system. • The answering system may not detect the remote access code when your announcement is playing. Wait until the announcement is over before entering the code. • There may be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.
Common cure for electronic equipment.	• If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed): • Disconnect the power to the telephone base. • Disconnect the battery pack on the handset. • Wait a few minutes before connecting power to the telephone base. • Re-install the battery pack and place the handset in the telephone base. • Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.

Please contact the technical support of the network provider for further information.

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

For technical support, please call VTech Technical Inquiry Hotline 852-2667 7433.

13. TECHNICAL SPECIFICATIONS

Basic Information	
Dimensions	Handset: L250 X W90.40 X H51.75mm Base: L203.65 X W42.00 X H21.5mm
Weight	Handset: 310g Base: 142.5g (include battery pack: 21g)
Power consumption	Base: 1.5w
Valid range	Indoor: 50m Outdoor: 300m
Handset Operating Time	Standby time: 100 Hours Talk time: 10 Hours
RF Parameter	
Transmission Power	Base: +24dBm Handset: +24dBm
Frequency	Cordless system: 1881.792~1897.344MHz **Bluetooth** system: 2.400~2.4835GHz
Number of Channels	DECT: 10 Channels **Bluetooth**: 79 Channels
Supply Power	
Base	DC6.0V/450mA
Handset	DC2.6V/750mA

Customer Service Centre

Suite 1601, Lever Tech Centre, 69-71 King Yip Street,

Kwun Tong, Kowloon, Hong Kong.

Customer Service Hotline: (852) 2666 5558

Technical Inquiry Hotline: (852) 2667 7433

Distributed in Hong Kong by: VTech Telecommunications Ltd. 91-003886-020-100

vtech

Innovation Beyond Technology™